



Document reference	TD-FP-JET-001
Revision	1.00
Date:	30/3/2014

Firmware Upgrade Guide

Why the Firmware is upgradable?

Upgrade is a feature where the operator gets benefited from the latest firmware development. Development might be to enhance the operating method or according to operators request. In both cases the operators keep up-to-date with latest firmware version.

Firmware may update to comply with new software update, as each firmware version tested and verified with compatible software version.

Upload Firmware mode

Press Enter and hold while switch on the machine from power switch

Enter Key in machine front panel







LCD will be blank

Firmware upgrading Steps

- 1- Download the file through website, save it
- 2- Run Jetronix-Eco , from tools choose connect the machine
- 3- Software will open upload firmware window
- 4- Confirm firmware upgrading.
- 5- Browse to choose the firmware file downloaded and saved.

Jetronix_FW_V1.01.rar

>> Download

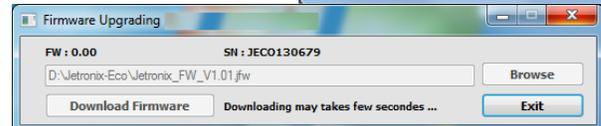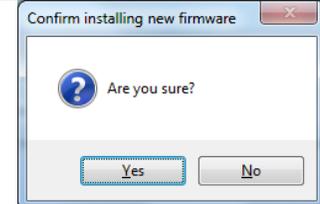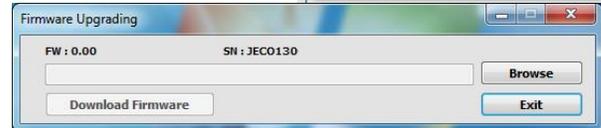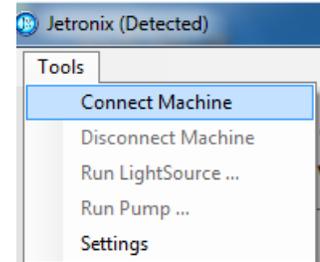




Jovy Systems® Limited

Document reference	TD-FP-JET-001
Revision	1.00
Date:	30/3/2014

6- *Importing done confirmation screen*

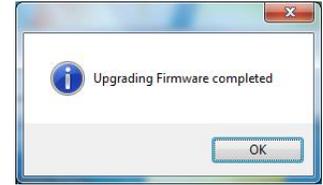

About

Jovy Systems continues improve and develop the product lines according to the latest technology and operator's requirements.

In case this document is seeking any further information needed, contact support@jovy-sys.com