



Reference:	DRAFT
Revision:	1.00
Date:	April 2015

## Turbo-IR Firmware Upgrade

This quick start up guide contains summarized steps to upgrade the Firmware of the Turbo-IR station through JOVY's PC Suite.

### Firmware update

With **Jovy® PC Suite** user will be able to keep the **Turbo-IR** up-to-date by updating its firmware through the USB connection.

To install a new firmware version to the **Turbo-IR**, Please follow the simple steps below:

- 1) Connect the **Turbo-IR** to a power supply of *220-240 volt AC / 50-60 Hz*.

- 2) Run the **Turbo-IR** station on Boot load mode by pushing and holding the Knob while turning on the power of the **Turbo-IR**.



- 3) The Screen will be dark when the Turbo-IR is turned on.



- 4) Then open **Jovy® PC Suite** and click connect.






Reference:	DRAFT
Revision:	1.00
Date:	April 2015

- 5) Firmware Window will open, and will display the Product ID and Device's Serial Number.




- 6) Choose the location of the latest Firmware [Downloaded](#).

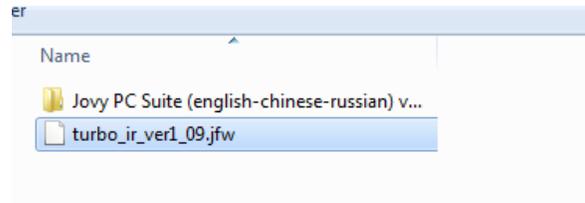

- 7) Confirm to start installing the new Firmware to the **Turbo-IR** station



- 8) Updating the firmware will start showing the progress of the process.

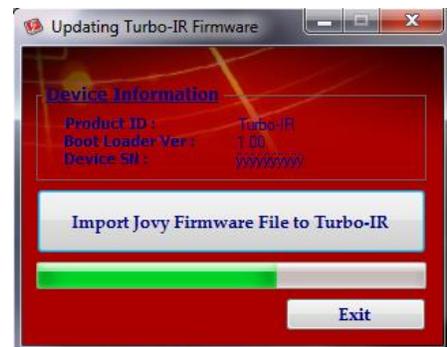



<b>Reference:</b>	DRAFT
<b>Revision:</b>	1.00
<b>Date:</b>	April 2015

- 9) When the process is successfully completed the opposite window will appear. Click "Ok".



- 10) Exit the Boot Loader screen. Restart the **Turbo-IR** Station and it will be ready to use with the latest firmware update.